


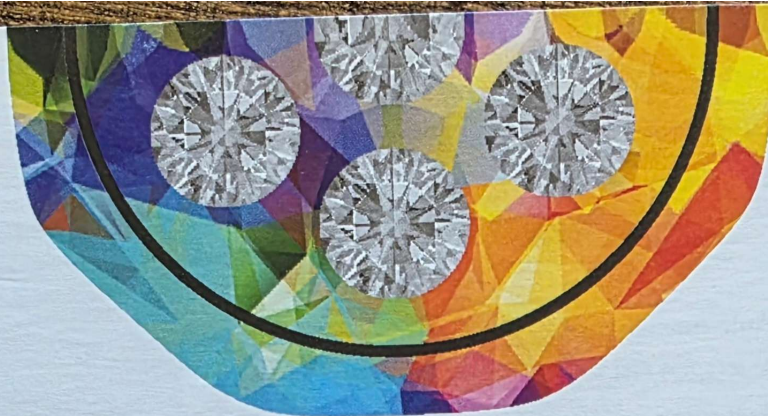

DONNER



MINI LED MOVING HEAD
Focus Star

User's Manual




IR REMOTE CONTROL

- 1) ON/OFF
- 2) Flash
- 3) Save
- 4) **Auto1** : Auto running mode1 which allow to select color (R,G,B,W,RG,RB,GB,RGB).
- 5) **Auto2** : Fast auto running mode
- 6) **Auto3** : Slow auto running mode
- 7) **Manual**: Allow to set PAN or TILT position at random, and to select color(R,G,B,W,RG,RB,GB,RGB).
- 8) **Music1**: Sound mode 1
- 9) **Music2**: Sound mode 2
- 10) **X+ , X-** : To adjust PAN position
- 11) **Y+ , Y-** : To adjust TILT position
- 12) **R, G, B, W, RG, RB, GB, RGB**:



DISPLAY

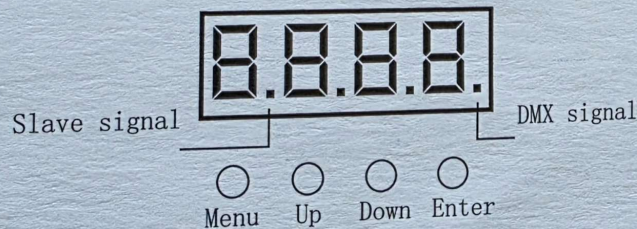

Menu : To select menu or exit

Up : Increase parameter


Down: Decrease parameter

Enter: Confirm or enter submenu

Note:

1. The machine has a function that auto recognizes DMX or SLAVE signal.
2. When any parameter is changed and to press the "Enter" button, the new value is saved after display "- - - -" on digital tube.

MENU

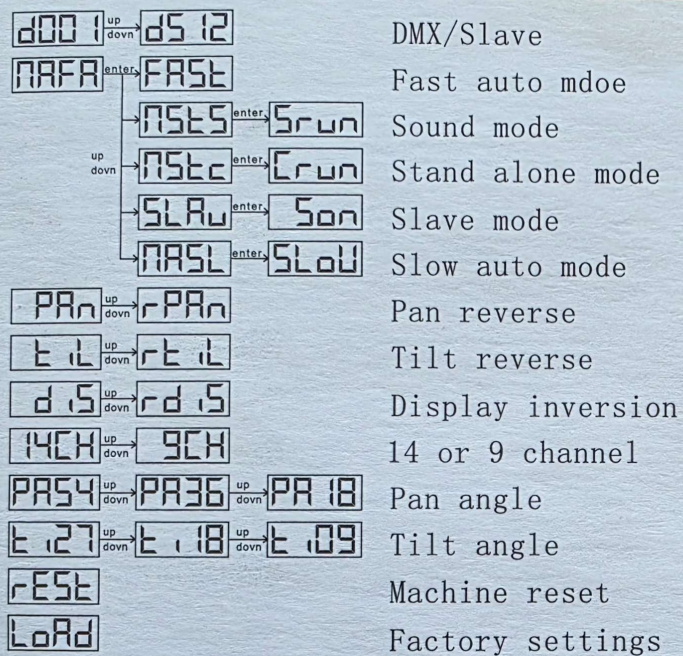

DMX

9 Channel

Channel	Value	Function
1CH	0-255	Pan
2CH	0-255	Tilt
3CH	0-7	OFF
	8-134	Master Dimmer
	135-239	Strobe from slow to fast
	240-255	Open
4CH	0-255	Red dimmer
5CH	0-255	Green dimmer
6CH	0-255	Blue dimmer
7CH	0-255	White dimmer
8CH	0-255	XY Speed
9CH	150-200	Reset

14 Channel

Channel	Value	Function
1CH	0-255	Pan
2CH	0-255	Pan Fine
3CH	0-255	Tilt
4CH	0-255	Tilt Fine
5CH	0-255	XY Speed
6CH	0-7	OFF
	8-134	Master Dimmer
	135-239	Strobe from slow to fast
	240-255	Open
7CH	0-255	Red dimmer
8CH	0-255	Green dimmer
9CH	0-255	Blue dimmer
10CH	0-255	White dimmer
11CH	0-7	Mix color depend on 7CH-10CH
	8-231	Macro color
	232-255	Color jumping
12CH	0-255	Color jumping speed
13CH	0-7	Control freely depend on 1CH-12CH
	8-63	Fast running
	64-127	Slow runing
	128-191	Sound 1
	192-255	Sound 2
14CH	150-200	Reset

MADE IN CHINA

