

HI,SUPER JET FOG MACHINE

USER MANUAL



FCC RoHS CE

# DISCLAIMER

---

**WARNING**

Read this manual carefully before installing and/or using this product. Failure to read the manual and to follow the printed instructions may lead to personal injury and/or damage to the product.

---

## FORWARD

Congratulations! Thanks for purchase from MOKA SFX.

This manual contains all information required for the intended use of the equipment. Deviation from the described intended use can result in a hazardous situation and/or property damage.

This manual includes notes and warnings on safe operation of the equipment.

## LIABILITY

Accepts no liability for claims from third parties arising from unauthorised use, use other than that stated in this manual, and use other than in accordance with the General Conditions registered at the Chamber of Commerce.

Refer further to the General Conditions. These are available on request, free of charge.

Although considerable care has been taken to ensure a correct and suitably comprehensive description of all relevant components, the manual may nonetheless contain errors and inaccuracies.

Should you detect any errors or inaccuracies in the manual, we would be grateful if you would inform us. This helps us to further improve our documentation.

## TECHNICAL DATA

Voltage	AC220v 50HZ ,110v 60HZ
Power	1700W
LED Source	27pcs x 3W RGB
Fuse	10-15A
Warm-up time	4 minutes(Interval heating time 20 seconds)
Spray Height	8-10m
Smoke time	8 S
Fuel consumption	200ml/min
Control	DMX512 (channels:8)
	Remote control (4 button 60m)
Oil bottle volume	2.5L
N.W.	12Kg
G.W.	13.5Kg
Product Size	49/42/20CM
Packing Size	55.5/49/28CM
Hanging hole size	16CM/29CM

## FEATURES

### DMX512

- Smoking smoke 0~9 Stop smoking, 10~255 Smoking size adjustment.
- LED total brightness adjustment 0~9LED all off, 10~255 total brightness adjustment.
- LED red brightness 0~9 off, 10~255 brightness adjustment.
- LED green brightness 0~9 off, 10~255 brightness adjustment.
- LED blue brightness 0~9 off, 10~255 brightness adjustment.
- Color gradient 0~9 does not work. 10~255, the larger the value, the faster the change, the 2~8 channel does not work.
- Color jump 0~9 does not work. 10~255, the larger the value, the faster the change, the 2~9 channel does not work.
- Strobe 0~9 does not work, 10~255, the larger the value, the faster the strobe.

## REMOTE CONTROL

- A button bright red light plus smoke
- B button bright green light plus smoke
- C button bright blue plus smoke
- D button bright red green blue plus smoke

## MENU DISPLAY DESCRIPTION

- ◆ Ready FOG - complete preheating, machine ready, can spray smoke Warming xx S - heating, countdown xxS
- ◆ Interval Set xx - interval setting
- ◆ Duration Set xx - Spray time setting
- ◆ DMX512 Set xxx - DMX address code setting
- ◆ Volume Set xxx - Spray output size setting

## BUTTON FUNCTION DESCRIPTION

FUNCTION	Menu page turning
UP	Digital plus
DOWN	Number minus
TIMER	Timed start/stop
VOLUME	Output start/stop puff
MANUAL	Manually touch the smoke

## FEATURE OF PRODUCT

- This machine adopts independent research and development of switching power supply. It is easy to install, greatly simplifying the circuit connection of the machine and greatly improving the stability of the machine.

- The amount of smoke is large, the column of smoke can reach 8 meters
- With the function of immediately stopping the smoke, no residual smoke, closer to the air column effect.
- Can be sprayed, can also be used upside down, side hanging
- You can set the remote control smoke color
- No oil automatic protection, will not damage the machine

## OIL FREE PROTECTION INSTRUCTION

- There is no oil in the oil pot. Within 20s, the machine will detect no oil. The LCD will display “NO LIQUID” and the oil pump will stop working.
- In the oil-free protection state, the three operation modes can exit the oil-free protection state.
- Turn off the power and turn it on again. Return to normal working condition.
- Use the DMX console. Pull the dmx first channel (assuming the machine address code is set to 1) to the 0 position, then put
- The push rod is pushed to 255. The machine will exit the oil-free protection state and enter the normal working state.
- Press and hold the manual key on the machine panel to pump oil. You can pump oil in about 10 sec

## PRECAUTIONS

- ✓ LED is mainly used as smoke dyeing, it is recommended to light up when spraying. Do not exceed 5 minutes when all three colors are on. It can't be constantly lit. If the 3 colors are always bright, the temperature of the light board will be too high, and the LED life will be significantly shortened. Monochrome or two colors can be long the period is lit.
- ✓ When the machine is hanging upside down, the light hook screw is screwed into the

machine part, not more than 25mm. The screw is too long and may be inside the chassis. The components interfere with and destroy the structure of the machine.

- ✓ The machine draws oil when the oil pipe is empty. When the oil is pumped, a small amount of water may be sprayed out. This is a normal phenomenon. No more water will be sprayed afterwards.

## MAINTENANCE

To achieve the maximum service life of the machine you must regularly clean the machine and test if it is functioning correctly.

Contact MOKA SFX if the machine is not functioning correctly.

---

**DANGER**

Do not replace parts yourself; always consult MOKA SFX.

---

## TROUBLESHOOTING

Always contact MOKA SFX if any malfunctions or errors occur that cannot be solved with the instructions as described in this manual.

