

44	000 - 255	LED43-LED45 Green
45	000 - 255	LED43-LED45 Blue
46	000 - 255	LED46-LED48 Red
47	000 - 255	LED46-LED48 Green
48	000 - 255	LED46-LED48 Blue

12. Controller Channel Mode

7 Channel mode

7 CH	Function	Value	Setting
1	Dimmer	000-255	From low to high intensity (0-100 %)
2	Strobe	000-004	Strobe off
3	Red	005-255	All Tube From low to high frequency
4	Green	000-255	All Tube From low to high intensity (0-100 %)
5	Blue	000-255	All Tube From low to high intensity (0-100 %)
6	Built-in programs	000-015	Not functional
		016-023	Program 1
		024-031	Program 2
		032-039	Program 3
		040-047	Program 4
		048-055	Program 5
		056-063	Program 6
		064-071	Program 7
		072-079	Program 8
		080-087	Program 9
		088-095	Program 10
		096-103	Program 11
		104-111	Program 12
		112-119	Program 13
		120-127	Program 14

	128-135	Program 15
	136-143	Program 16
	144-151	Program 17
	152-159	Program 18
	160-167	Program 19
	168-175	Program 20
	176-183	Program 21
	184-191	Program 22
	192-199	Program 23
	200-207	Program 24
	208-215	Program 25
	216-223	Program 26
	224-231	Program 27
	232-239	Program 28
	240-247	Program 29
	248-255	Programs 1-29
7	Program speed	From slow to fast

26 Channel mode

26 CH	Description	Value	Setting
1	Dimmer	000-255	From low to high intensity (0-100 %)
2	Strobe	000-004	Strobe off
		005-255	From low to high frequency
3		000 - 255	Dev 0
4	LED1-LED48 Red	000 - 255	Dev 0
5	LED1-LED48 Green	000 - 255	Dev 0
6	LED1-LED48 Blue	000 - 255	Dev 1
7	LED1-LED48 Red	000 - 255	Dev 1
8	LED1-LED48 Green	000 - 255	Dev 1
9	LED1-LED48 Blue	000 - 255	Dev 1
	LED1-LED48 Red	000 - 255	Dev 2