

  
**ULTIMATE**  
CONFETTI

# EC-1

Electric / DMX  
Confetti Cannon Base



Instruction Manual

# Ultimate Confetti EC-1 Instructions

Thank you for purchasing the Ultimate Confetti EC-1. For your personal safety and use of this product, please read this manual carefully and follow the instructions before using to avoid personal injury and/or product damage.

## Product Introduction

The Ultimate Confetti EC-1 is a small single-head confetti transmitter which can be operated manually or controlled by DMX512(up/down channel buttons). Please follow these power settings:

**ON** = Instant power. **\*\*WILL FIRE IMMEDIATELY\*\***


**DMX** = Set to fire from the included remote or your DMX panel (If applicable)

The shot angle can be adjusted using the adjustment knobs on each side of the receptacle base. Make sure to tighten all knobs and that electric cannon is firmly plugged into the channel slot before operating the machine. (May require force)



## Contents

- \* Ultimate Confetti EC-1
- \* Power cable
- \* DMX cable
- \* Ultimate Confetti EC-1 Instruction Manual

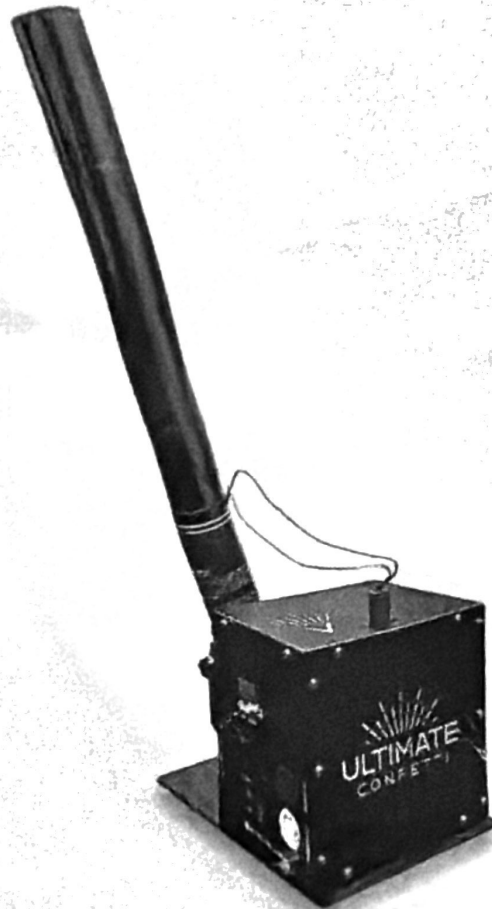

## Technical Information

Voltage	AC110V/220V 50Hz/60Hz	Rated Power	150W
Dimensions	29*24*25CM	Weight	3.15kg
Control Mode	Manual control, Remote control, DMX512		

If you experience problems with your unit please feel free to contact our Technical Support team at: [info@ultimateconfetti.com](mailto:info@ultimateconfetti.com)

For immediate assistance, feel free to contact us during regular business hours  
M-F from 9am-5pm: (972) 245-9999