

120W small steel gun manual

1. Working voltage: AC220V/50Hz
2. Product power: 150W
3. Lamp beads parameters: 100 W white light
4. Control method: international general DMX512, 12 channels
5. Working mode: DMX512, master/slave, self-propelled, voice control
6. Dimming mode: 0~100% super smooth dimming
7. Strobe: 25 times/sec

Menu manual

Serial number/Main menu	Description
Addr	A001---A512 address code
CHnd	12CH channel selection
SLnd	Operation mode selection (DMX self-propelled voice control)
Pan	YES, NO Motor X forward and reverse settings
Tilt	YES, NO Motor Y forward and reverse settings
SEne	Voice control sensitivity adjustment (0-100)
LED	ON, OFF screen always on setting
DISP	YES, NO display forward and reverse settings
TEMP	XXX display temperature
Ver	V100 software version number
Faet	YES, NO restore factory settings
Fine-tuning menu	Press the menu button for 5S and hold it down to bring up the fine-tuning menu (not recommended to adjust at will)
Pan	0-127 -1-127 Forward and reverse fine adjustment
Tilt	0-127 -1-127 Forward and reverse fine adjustment
Color	0-127 -1-127 Forward and reverse fine adjustment
Gobo	0-127 -1-127 Forward and reverse fine adjustment

12 channels	Features	DMX value	description
1	X axis	0-255	
2	X-axis fine adjustment	0-255	
3	Y axis	0-255	
4	Y-axis fine adjustment	0-255	
5	X Y axis speed	0-255	Speed from fast to slow
6	Pattern white light	0-255	Pattern dimming from dark to bright
7	Pattern strobe	0	No function
		1-255	Synchronous strobe speed from slow to fast (1HZ~25HZ)
8	Color wheel	0-15	White light
		16-31	Color 1 <i>RED</i>
		32-47	Color 2 <i>ORANGE</i>
		48-63	Color 3 <i>YELLOW/WHITE</i>
		64-79	Color 4 <i>GREEN</i>
		80-95	Color 5 <i>BLUE</i>
		96-111	Color 6 <i>MAGENTA</i>
		112-127	Color 7 <i>CYANO</i>
		128-191	Clockwise color automatically switches from fast to slow
		192-255	Automatically switch colors counterclockwise from slow to fast
9	Pattern plate	0-7	White light
		8-15	Pattern 1
		16-23	Pattern 2
		24-31	Pattern 3
		32-39	Pattern 4
		40-47	Pattern 5
		48-55	Pattern 6
		56-63	Pattern 7
		64-73	Pattern 7 jitter from slow to fast
		74-82	Pattern 6 jitter from slow to fast
		83-91	Pattern 5 jitter from slow to fast
		92-100	Pattern 4 jitter from slow to fast
		101-109	Pattern 3 jitter from slow to fast
		110-118	Pattern 2 jitter from slow to fast
		119-127	Pattern 1 jitter from slow to fast
		128-191	Clockwise color automatically switches from fast to slow
		192-255	Automatically switch colors counterclockwise from slow to fast
10	Prism	0-7	Turn off the prism
		8-127	Turn on the prism
		128-255	Prism rotation from slow to fast
11	Macro function	0-49	Channel 1 to channel 10 are valid
		50-200	Self-propelled
		201-255	Light body sound control
12	Reset	0-240	No function
		241-255	The lamp body is reset and valid for 5s.

installed or short-circuited, it will be protected and run with a low brightness and display ERR.

In DMX mode, there is no DMX signal, the first digital tube will flash, and the middle position of the last digital tube will flash after the screen saver. In the display temperature menu (ERR) means no installation or short circuit)