

LED PROFESSIONAL STAGE LIGHT EQUIPMENT

Mini Spider Light



Please read the instructions before using

MENU:

ADDR	A001-A512	Address Setting
CHND	7CH	7 Channel option
	15CH	15 Channel option
SLND	MAST	Auto Mode (selfpropelled)
	SOUN	sound mode
	SLAV	Master and Slave option
SHND	SH1—SH24	Effect selected.SH24 for multi-effect
		self-propelled;SPED 01-08 Chase speed from slow to fast
SOUD	ON,OFF	Sound control Switch
SOEN	0-100	Sound Sensitivity(0 close,100 the most)
TEST	YES	Automatically Test
DISP	ON	Reverse Display
	YES	Reverse Display
LED	OFF	Back-light Switch
	ON	Back-light Switch
1TIL	ON	Y1 Motor reverse
	YES	Y1 Motor reverse
2TIL	ON	Y2 Motor reverse
	YES	Y2 Motor reverse
DEFT	YES,ON	Reset

DMX Channel Function

7 Channel Mode(NOTE:Enter Addr-A001 to DMX control mode)

Channel	Function	Value	Instruction
1	Motor1 route	0-255	0°—135°
2	Motor2 route	0-255	0°—135°
3	Sun Dimmer	0-255	0—100%
4	Strobe	0-9	No Strobe
		10-255	Strobe speed from slow to fast
5	Effect	0-7	No Effect
		8-17	Effect 1
		18-27	Effect 2
		28-37	Effect 3
		37-47	Effect 4
		48-57	Effect 5
		58-67	Effect 6
		68-77	Effect 7
		78-87	Effect 8
		88-97	Effect 9
		98-107	Effect 10
		108-117	Effect 11
		118-127	Effect 12
		128-136	Effect 13
		137-146	Effect 14
		147-156	Effect 15
157-166	Effect 16		


5	Effect	177-186	Effect 18
		187-196	Effect 19
		197-206	Effect 20
		207-216	Effect 21
		217-226	Effect 22
		227-236	Effect 23
		237-246	Effect 24 Self-propelled multi-effects
		247-255	Effect 25 Sound
6	Effect speed	0-255	From fast to slow
7	Reset	241-250	For 5 seconds to reset

15 Channel Mode(NOTE:Enter Addr-A001 to DMX control mode)


Channel	Function	Value	Instruction
1	Motor1 route	0-255	60°—150°
2	Motor2 route	0-255	60°—150°
3	Sum Dimmer	0-255	0—100%
4	Strobe	0-9	No Strobe
		10-255	Strobe speed from slow to
5	LED1 Dimming	0-255	0—100%
6	LED2 Dimming	0-255	0—100%
7	LED3 Dimming	0-255	0—100%
8	LED4 Dimming	0-255	0—100%
9	LED5 Dimming	0-255	0—100%
10	LED6 Dimming	0-255	0—100%
11	LED7 Dimming	0-255	0—100%
12	LED8 Dimming	0-255	0—100%
13	Marco Function	0-7	No Effect
		8-17	Effect 1
		18-27	Effect 2
		28-37	Effect 3
		38-47	Effect 4
		48-57	Effect 5
		58-67	Effect 6
		68-77	Effect 7
		78-87	Effect 8
		88-97	Effect 9
		98-107	Effect 10
		108-117	Effect 11
		118-127	Effect 12
		128-136	Effect 13
		137-146	Effect 14
		147-156	Effect 15
157-166	Effect 16		
167-176	Effect 17		
177-186	Effect 18		
187-196	Effect 19		

		197-206	Effect 20
		207-216	Effect 21
		217-226	Effect 22
		227-236	Effect 23
		237-246	Effect 24 Self-propelled multi-effects
		247-255	Effect 25 Sound
14	Effect speed	0-255	From slow to fast
15	Reset	241-250	For 5 seconds to reset

User's Manual

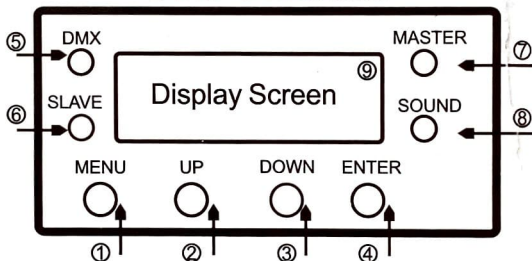

- 1.MENU
- 2.UP
- 3.DOWN
- 4.ENTER
- 5.DMX Pilot Lamp
- 6.Slave Pilot Lamp
- 7.Master Pilot Lamp
- 8.Sound Pilot Lamp
- 9.Display Screen

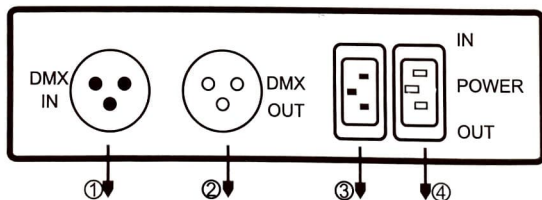

- 1.DMX IN
- 2.DMX OUT
- 3.POWER IN
- 4.Connect output

"rSt" is displayed after the power is plugged in. The moving head light is being reset. Please do not operate.

The step to start the Self-Propelled mode:

- 1.Press "MENU" to find "SInD",
- 2.Press "MENER" to enter the menu,
- 3.Press "UP" or "DOWN" to select "NAST", and press "ENTER".

The step to start the Sound Active Control mode:

- 1.Press "MENU" to find "SoUd",
- 2.Press "ENTER" to enter the menu,
- 3.Press "UP" or "DOWN" to select "ON", and press "ENTER".
- 4.Continue to press "MENU" to find "SLNd", press "ENTER".
- 5.Press "UP" or "DOWN" to select "SoUn", and press "ENTER".