

### LED Display MENU Instruction

【MENU】 【UP】 【DOWN】 Change value 【ENTER】 Confirm

MENU	Function
A001	001-512, DMX address setting
P001	001-100, pump output adjustment
D001-D900	Duration time at Time&Ration mode
I001-I900	Interval time at Time&Ration mode
LED0	LED light off
LED1	LED Red
LED2	LED Green
LED3	LED Blue
LED4	LED Yellow
LED5	LED Purple
LED6	LED Cyan
LED7	LED White
LED8	LED jump change
LED9	LED gradual change

### DMX Channel:

CH	Function	Value	Description
1	Pump output	0-255	Spray the fog, 0-100% pump output adjustment
2	LED Red	0-255	LED red dimming
3	LED Green	0-255	LED green dimming
4	LED Blue	0-255	LED blue dimming
5	LED strobe	0-3	No strobe
		4-255	Strobe from slow to fast
6	Mode	0-9	CH2-CH5 valid
		10-89	LED jump change
		90-169	LED gradual change
		170-255	LED pulse change
7	Speed	0-255	CH6 speed

# User Manual

## 6LED Up Spray Fog Machine



Please read this manual carefully before operation