

Never stand directly below the device when mounting, removing, or servicing the fixture, from a ceiling, or set on a flat level surface (see illustration below). Be sure this fixture is kept at least 0.5m (1.5ft) away from any flammable (decoration etc.)

Always use and install the supplied safety cable as a safe cable as safety measure to prevent accidental damage and /or injury in the event the clamp fails.

### 2.2 Mounting points:

Overhead mounting requires extensive experience, including amongst others calculating working load limits, a fine knowledge of the installation material being used, and periodic safety inspection of all

Function	Value	Percent / Setting	Mode 9CH	Mode 11CH
Pan	000-255	0~100%	1	1
X-Pan	000-255	0~100%		2
Tilt	000-255	0~100%	2	3
Y-Tilt	000-255	0~100%		4
Color	000-007 008-014 015-021 022-028 029-035 036-042 043-049 050-056 057-127 128-189 190-193 194-255	Color 1 Color 2 Color 3 Color 4 Color 5 Color 6 Color 7 Color 8 Half color Color-Fast-slow-stop Color-Slow-Fast	3	5
Gobo	000-007 008-015 016-023 024-031 032-039 040-047	Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6	4	6

	043-049 050-056 057-127 128-189 190-193 194-255	Color 7 Color 8 Half color Color-Fast-slow-stop Color-Slow-Fast		
Gobo	000-007 008-015 016-023 024-031 032-039 040-047 048-055 056-063 064-071 072-079 080-087 088-095 096-103 104-111 112-119 120-127 128-189 190-193 194-255	Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 8 Gobo 1 Jitter Gobo 2 Jitter Gobo 3 Jitter Gobo 4 Jitter Gobo 5 Jitter Gobo 6 Jitter Gobo 7 Jitter Gobo 8 Jitter Gobo Fast-slow-stop Gobo Slow-Fast	4	6
Strobe	000-007 008-015 016-131 132-139 140-181 182-189 190-231 232-239 240-247 248-255	ON OFF slow-fast OFF Fast-ON Slow-OFF OFF Fast-OFF Slow-ON OFF Dimming OFF	5	7
Dimming	000-255	0~100%	6	8

Pan/Tilt Speed	000-255	Fast-Slow	7	9
Model	000-069 070-079 080-089 090-099 100-109 110-119 120-199 200-209 210-249 250-255	when Pan Tilt moving lighting-ON when Color moving lighting-ON when Gobo moving lighting -ON Sound effects show	8	10
Dim Modes	000-020 021-040 041-060 061-080 081-100 101-255	Standard Stage TV Building Theatre Reset	9	11

installation material and the fixture. If you lack these qualifications, Do not attempt the installation yourself, improper installation can result in bodily injury.

Be sure to complete all rigging and installation procedures before connecting the main power cord to the appropriate wall outlet.

### 2.3 Clamp mounting :

The LED moving head provides a unique mounting bracket assembly that integrates the bottom of the base, the included 'omega bracket' and the safety cable rigging point in one unit (see the illustration below). When mounting this fixture to truss be sure to secure an appropriately rated clamp to the included omega bracket using a M10 screw fitted through the center hole of the 'omega bracket'. As an added safety measure be sure to attached at least one properly rated safety cable to the fixture using on of the safety cable rigging point integrated in the base assembly.