


## 12 LEDs Par Light

### User Manual

Thank you for choosing the mini 12 LEDs par light, which features jump, gradual, sound activate strobe and scrolling lighting effect. Whenever you go dancing or to a show, it can fuel your passion and create the best visual atmosphere. Professional used in Disco, Clubs, KTV, Pub, Bar, Banquet, weddings, etc. The manual describes how to use it and the safety issues. Please read it carefully and keep it as your reference.

#### A. Specifications:

- Power Voltage: AC100V-240V / 50-60 Hz
- Power Consumption: 15W
- LED: 12 pcs \* 1W LED (Red\*3, Green\*3, Blue\*3, White\*3)
- Mode: Auto / Voice-activated / DMX / Master-slave
- Channel: 8CH
- Beam Angle: Approx. 25°
- Dimming: 0% - 100%
- LED Life: 10000 Hours
- Connector: 3 Pin XLR
- Waterproof: IP20
- Working Temperature: -20°C- 40°C
- Shell Material: ABS Plastic
- Size: 14\*14\*14cm / 5.5\*5.5\*5.5 inch
- Gross Weight: 595g

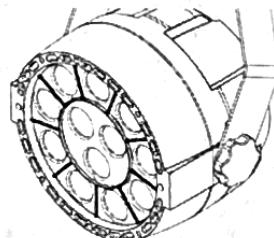

#### B. Package Includes

- 1 x Par Light
- 1 x Screws

1 x Bracket

1 x User Manual

#### C. Operation

8888

A B C D

- A: Menu - Mode Selection
- B: Up - Value Added
- C: Down - Value Subtracted
- D: Enter - Confirmation

#### Function of LED Display

| Menu  | Numerical    | Function               | Description                                                                                    |
|-------|--------------|------------------------|------------------------------------------------------------------------------------------------|
| D001  | d001 - d512  | DMX                    | N/A                                                                                            |
| IP.01 | IP.01-IP.64  | Master-Slave           | Up to 64pcs Slave Lights                                                                       |
| A1.01 | A1.01-A1.18  | Static Color Selection | Color Details: DMX CH2 Value 0-209                                                             |
| A2.01 | A2.01- A2.32 | Jump Change            | Adjust Speed 01-32                                                                             |
| A3.01 | A3.01- A3.19 | Gradual Change         | Choose 01-19 to select color, then press "enter" button to select change speed from 01-32      |
| A4.01 | A4.01- A4.19 | Sound Activate         | Choose 01-19 to select color, then press "enter" button to select sound sensitivity from 01-04 |
| A5.01 | A5.01- A5.19 | Strobe                 | Choose 01-19 to select color, then press "enter" button to select strobe speed from 01-32      |
| A6.01 | /            | Auto                   | Speed From Slow to Fast and RGBW Strobe                                                        |

|       |             |                           |                                                                                              |
|-------|-------------|---------------------------|----------------------------------------------------------------------------------------------|
| A7.01 | A7.01-A7.19 | Scrolling Lighting Effect | Choose 01-19 to select color, then press "enter" button to select scrolling speed from 01-32 |
| r000  | r000-r255   | Red Color Dimmer          | From Dark to Bright                                                                          |
| G000  | G000-G255   | Green Color Dimmer        | From Dark to Bright                                                                          |
| b000  | b000-b255   | Blue Color Dimmer         | From Dark to Bright                                                                          |
| u000  | u000-u255   | White Color Dimmer        | From Dark to Bright                                                                          |

\* 01-19 Color Selection Details: DMX Mode – CH2

\* Single color brightness adjustment can be only achieved when the value of other three colors is 000, otherwise individual color brightness cannot be adjusted

\* Master-slave Mode:

Step 1: Connect lights with 3 Pin XLR cable

Step 2: Choose one as master light, set function mode

Step 3: Others will be slave light; set the first slave lights is IP.01, the second slave light is IP.02, the third slave light is IP.03.....up to IP.64

#### DMX Control

#### 8 Channels

| Channel                             | Value   | Functional Description                           |
|-------------------------------------|---------|--------------------------------------------------|
| CH1                                 | 0-10    | OFF                                              |
|                                     | 11-50   | Static Color (Combine CH2-Color Selection)       |
|                                     | 51-100  | Jump (Combine CH2-Color Selection; CH3-Speed)    |
|                                     | 101-150 | Gradual (Combine CH2-Color Selection; CH3-Speed) |
|                                     | 151-200 | Sound Activate (Combine CH2-Color Selection)     |
|                                     | 200-255 | Strobe (Combine CH2-Color Selection; CH3-Speed)  |
| CH2<br>(Keep<br>Value of<br>CH1 Is) | 0-39    | All Color                                        |
|                                     | 40-49   | Red                                              |
|                                     | 50-59   | Green                                            |
|                                     | 60-69   | Blue                                             |

|              |         |                                                   |
|--------------|---------|---------------------------------------------------|
| NOT<br>0-10) | 70+79   | Yellow                                            |
|              | 80-89   | Cyan                                              |
|              | 90-99   | Purple                                            |
|              | 100-109 | White                                             |
|              | 110-119 | Red + Green                                       |
|              | 120-129 | Red + Blue                                        |
|              | 130-139 | Red + White                                       |
|              | 140-149 | Green + Blue                                      |
|              | 150-159 | Green + White                                     |
|              | 160-169 | Blue + White                                      |
|              | 170-179 | Red + Green + White                               |
|              | 180-189 | Red + Blue + White                                |
|              | 190-199 | Green + Blue + White                              |
|              | 200-209 | Red + Green + Blue                                |
|              | 210-255 | Red + Green + Blue + White                        |
| CH3          | 0-255   | Speed Adjustable (Control CH1)- From Slow to Fast |
| CH4          | 0-255   | Master Dimming (CH5-CH8)                          |
| CH5          | 0-255   | Red Light – From Dark to Bright                   |
| CH6          | 0-255   | Green Light - From Dark to Bright                 |
| CH7          | 0-255   | Blue Light - From Dark to Bright                  |
| CH8          | 0-255   | White Light - From Dark to Bright                 |

#### D. Note

1. Do not touch the light by hand because of high temperature after long time working
2. Never install the light on the surface of flammable objects
3. Please do not look at the light directly, in case it might damage your eyes
4. Indoor use only, do not use it frequently under the humid environment
5. Keep away from flammable objects at least 5m